



Operating Instructions

 
 
 
 
 
863 Valley View Road, Eighty Four, PA 15330 USA
Tel: 724-941-9701 Fax: 724-941-1369 e-mail: skctech@skcinc.com

Rate Reducer for ULTRA Passive Samplers Cat. No. 690-300



! Wear gloves to install and remove the Rate Reducer (*photos shown without gloves for clarity*).

1. **Immediately before sampling**, slide sampler cover away from sampling holes. To do this, press the end of the sampler without holes against the heel of your hand and use fingertips of same hand to slide cover toward palm until cover is flush with end of sampler.
2. Grip sampler tightly with thumb covering sampling holes. Grip cover and slide it off end of sampler.
3. Align channels on Rate Reducer with slide rails on sampler. Slide reducer toward sampling holes until reducer rests against stop.
4. After desired sampling period, remove sampler from worker. **Immediately** remove Rate Reducer using the same technique described in Steps 1 and 2. Dispose of reducer using appropriate procedures.
5. **Immediately** replace cover by aligning channels with slide rails on sampler and slide cover toward sampling holes until cover rests against stop.

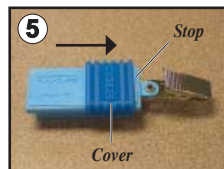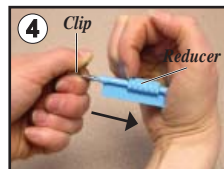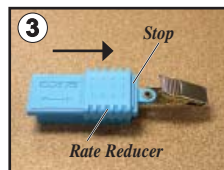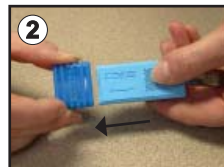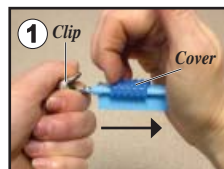

For detailed instructions on using the SKC ULTRA® Passive Sampler, go to www.skinc.com/prod/690-101.asp.

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skinc.com/warranty.asp>.