




Operating Instructions

863 Valley View Road, Eighty Four, PA 15330
Tel: 724-941-9701 • www.skcinc.com

Tube Holder Cat. No. 224-29H

Description

The SKC Tube Holder Cat. No. 224-29H prevents accidental breakage of the sample tube during use. It is designed for use with Cat. Nos. 226-142 and 226-177 sorbent tubes. The tube holder is a standard tube holder fitted with a special durable protective cover for the sorbent tube and a 3-foot length of Tygon tubing. A collar clip fastened to the protective cover allows for easy attachment to the worker. A flexible metal coil surrounds the tubing just below the holder and allows the tubing to bend without blocking airflow.

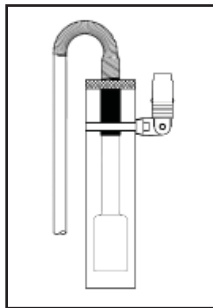

How to Use

Unscrew the cylindrical white protective cover from the dark brown tube holder. Insert the small end of the tube securely into the rubber sleeve of the tube holder. Replace the protective cover. Attach the free end of Tygon tubing to the inlet of the sample pump. Clip the protective cover to the clothing in the worker's breathing zone with the inlet facing down. Sample at the recommended flow rate.